





**VERTITEC**  
**REF.-Silla en uso**

DWG. NO.	REV.
BORJA PEIRÓ SIGNES	SHEET 1 OF 2

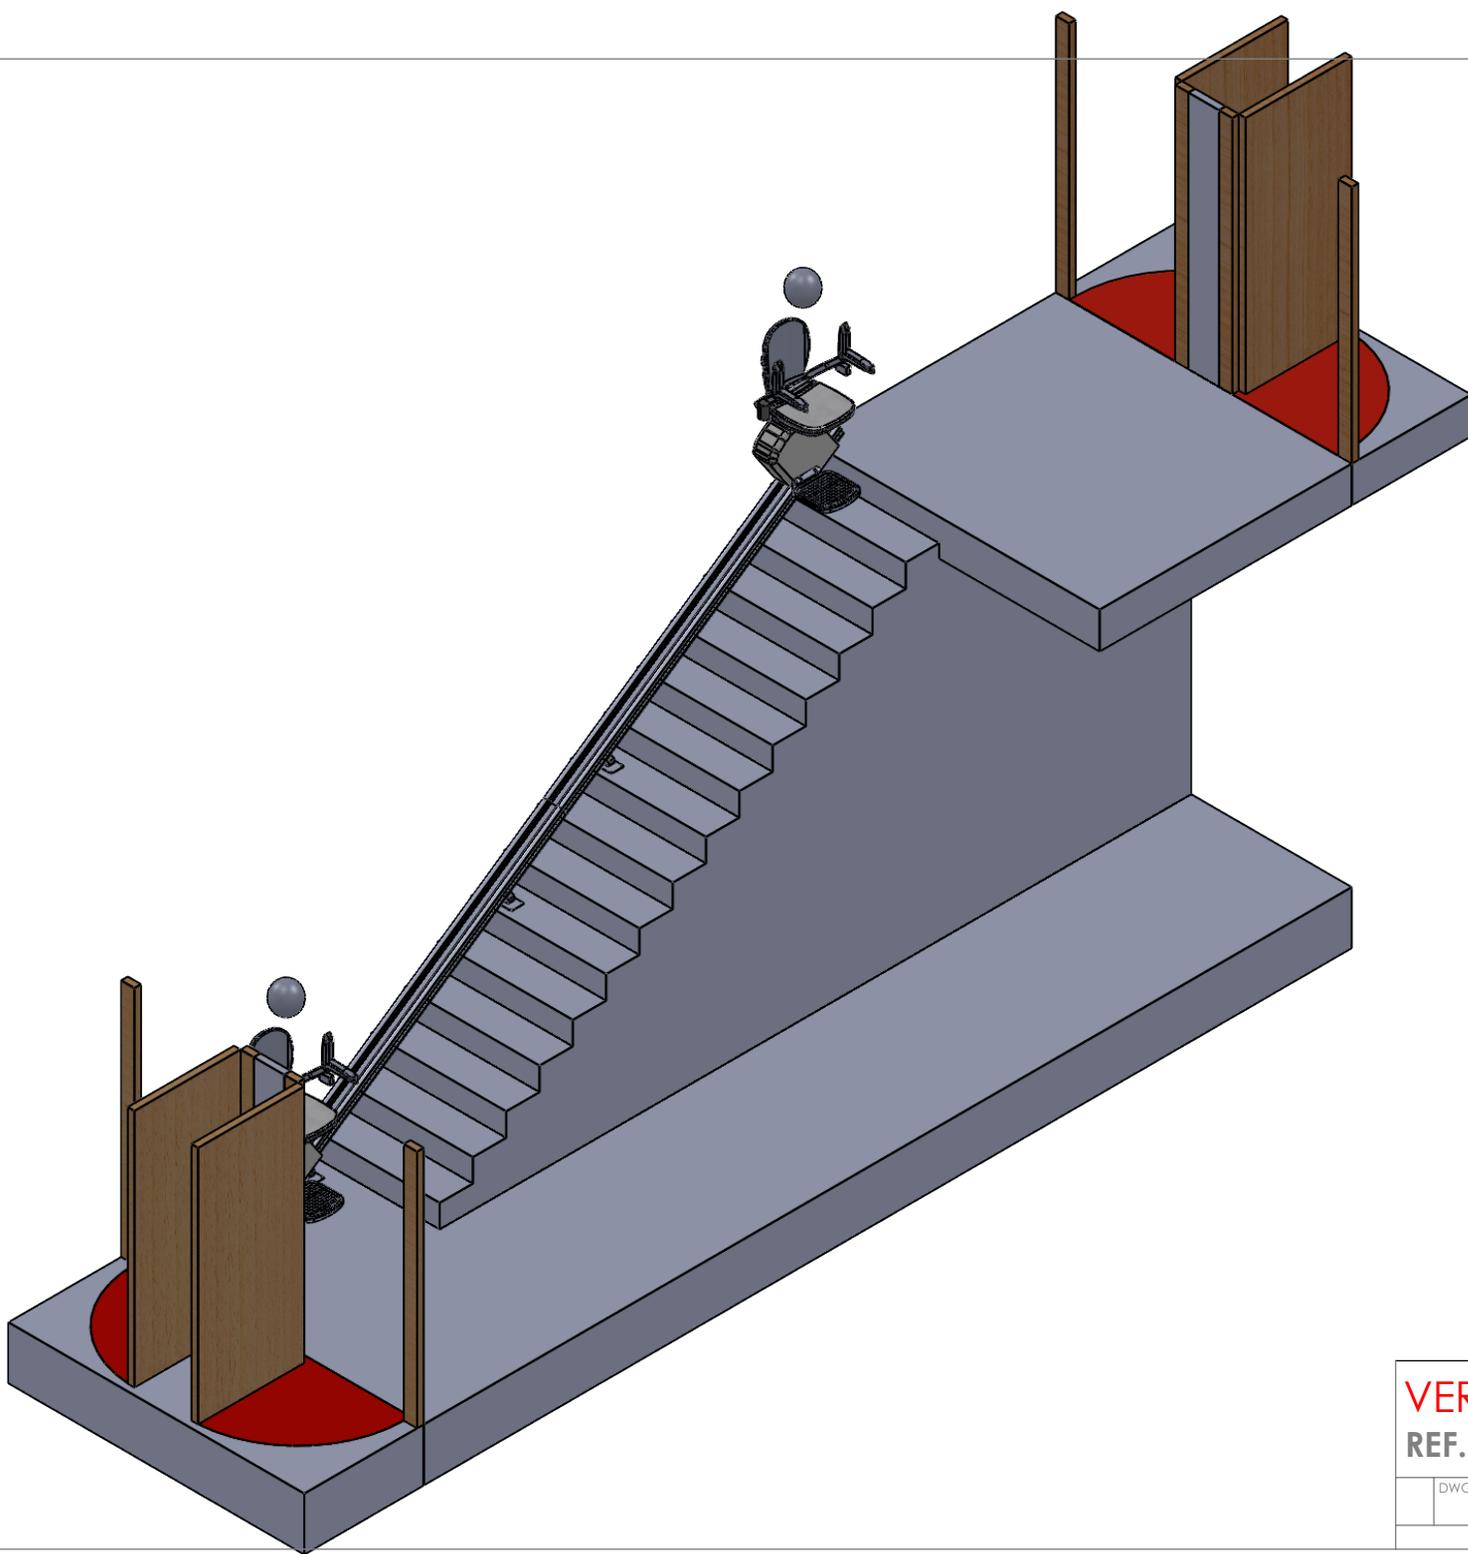


**VERTITEC**  
**REF.-En uso**

DWG. NO.	REV.
BORJA PEIRÓ SIGNÉS	SHEET 2 OF 2


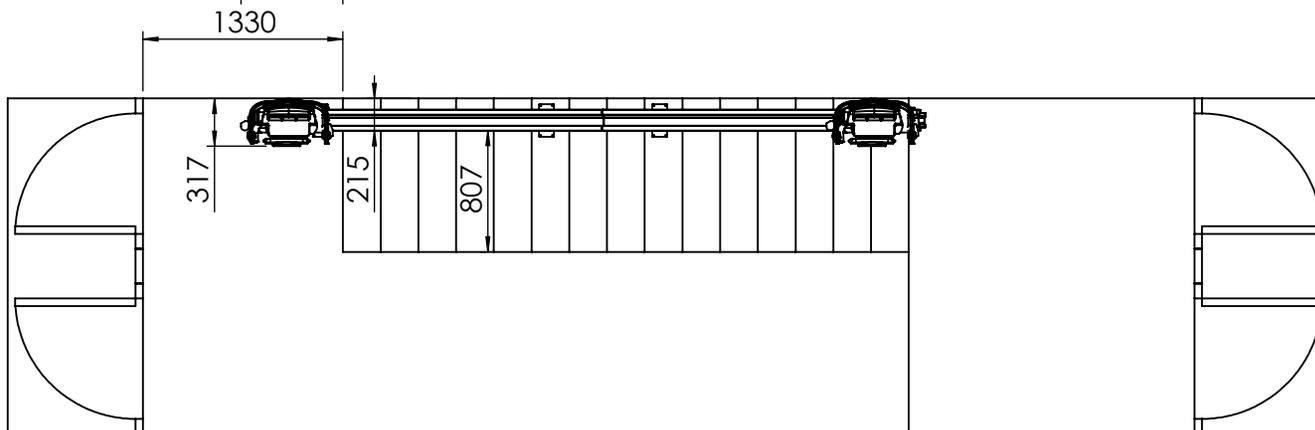
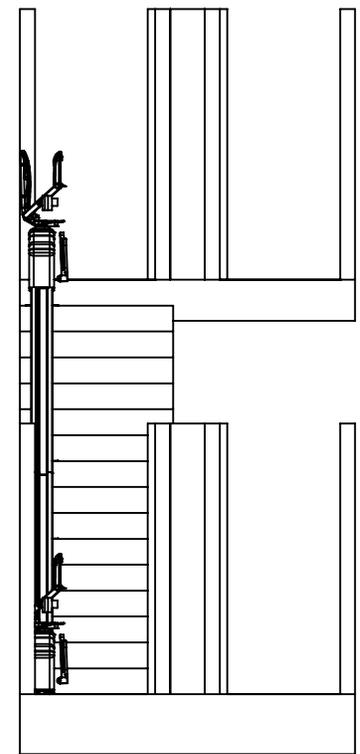
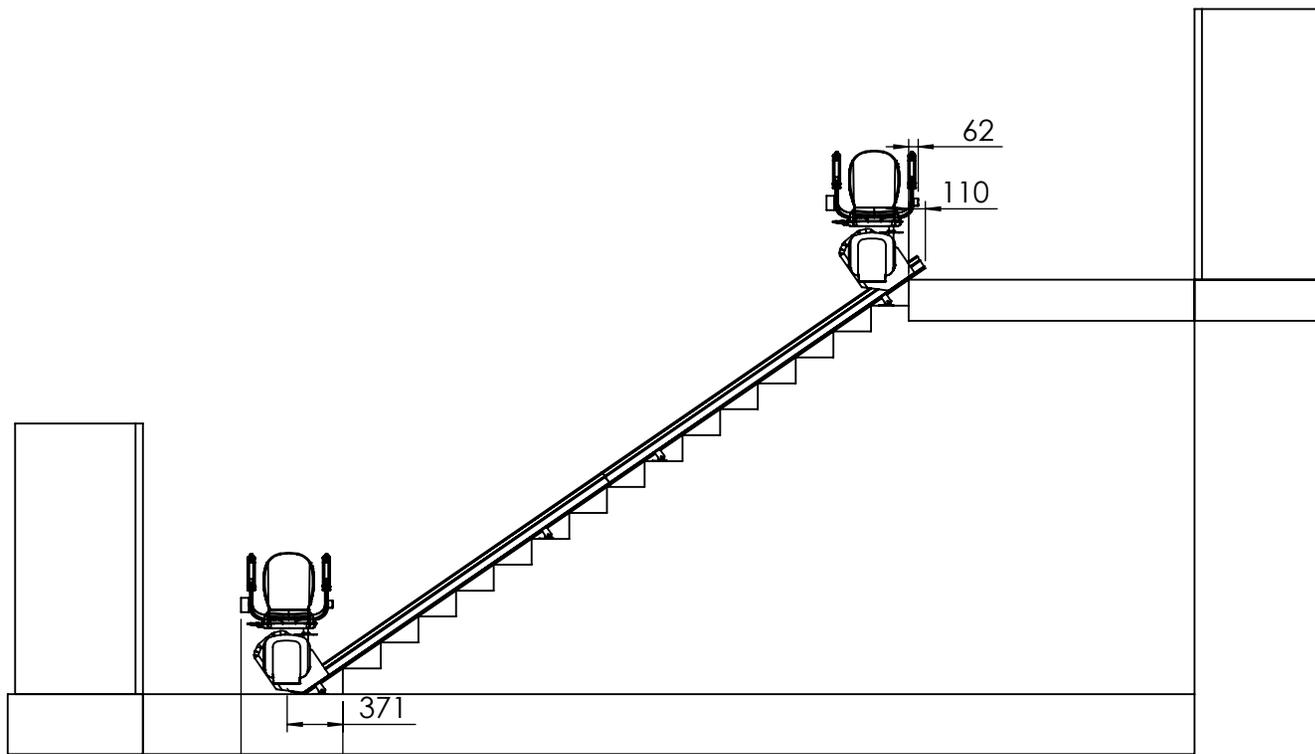


<b>VERTITEC</b>	
<b>REF.-Plegada</b>	
DWG. NO.	REV.
BORJA PEIRÓ SIGNÉS	SHEET 1 OF 2

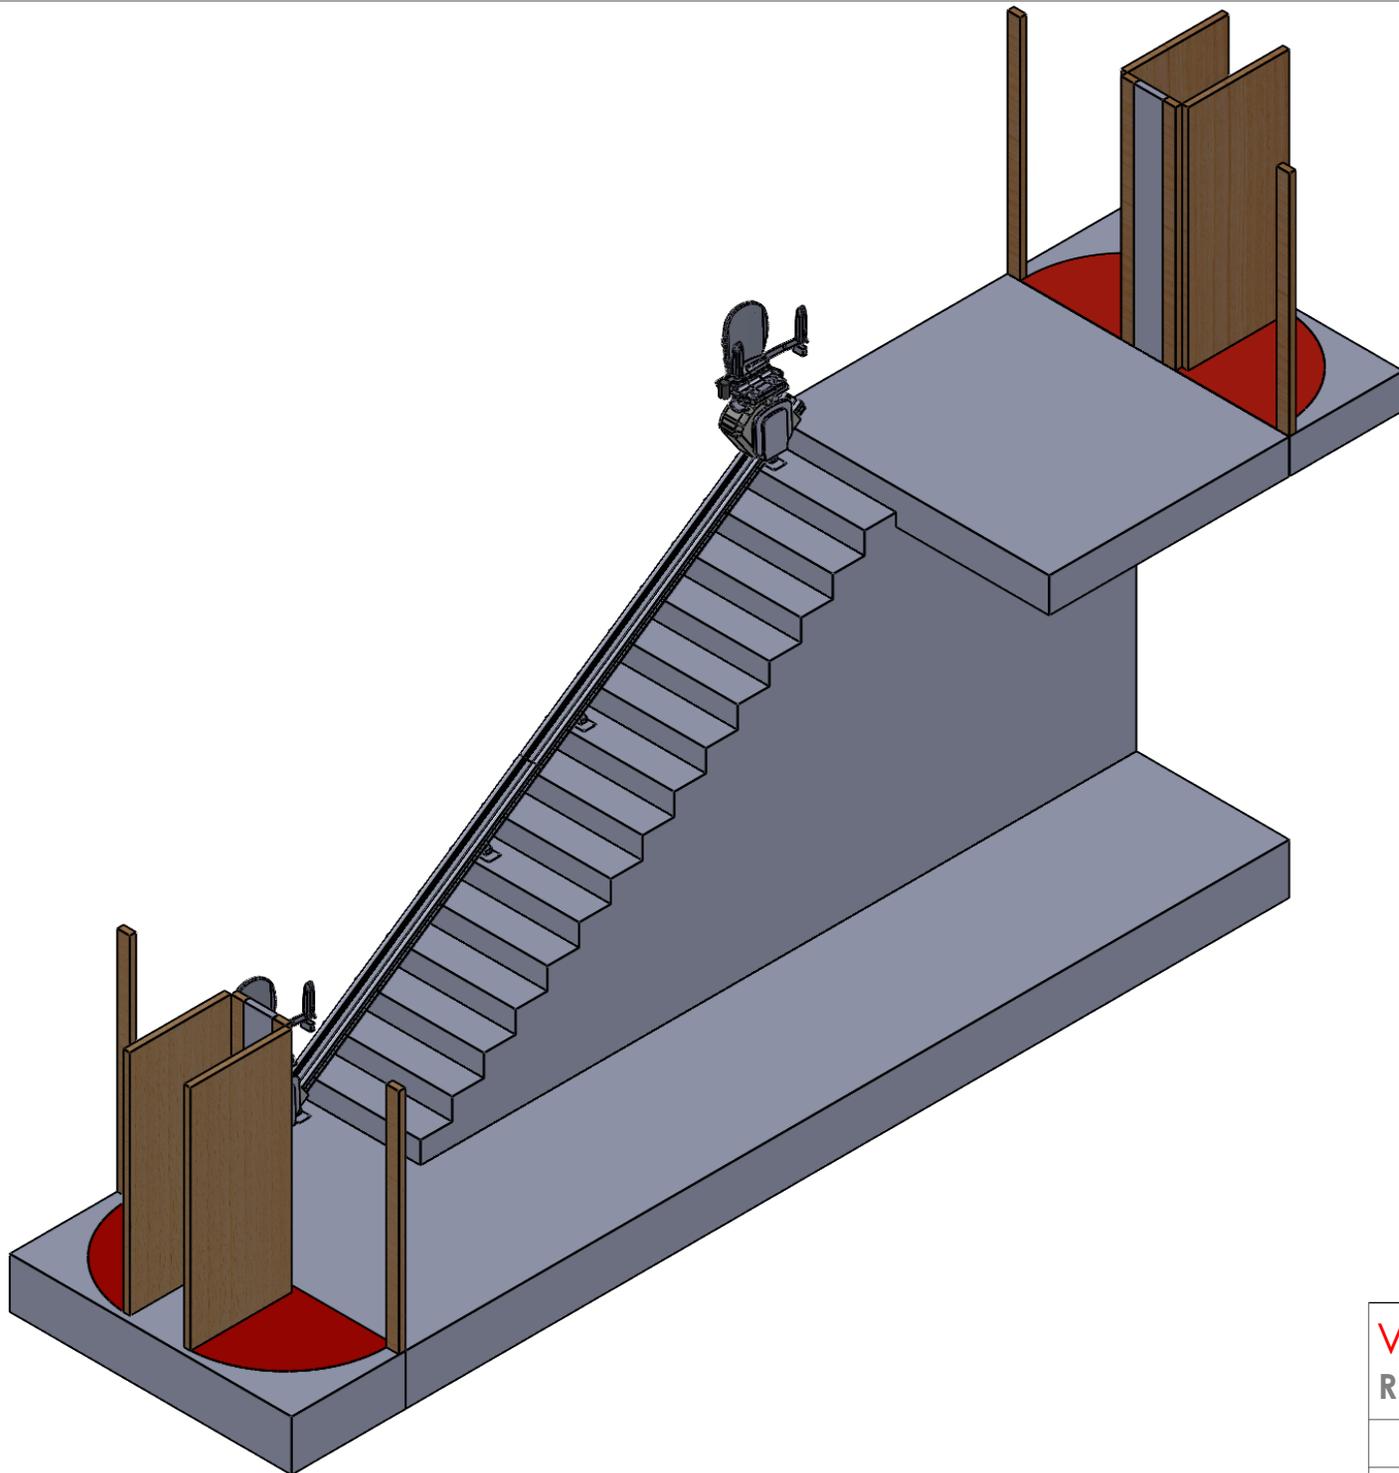

**VERTITEC**  
**REF.-Plegada**

DWG. NO.	REV.
BORJA PEIRÓ SIGNES	SHEET 2 OF 2

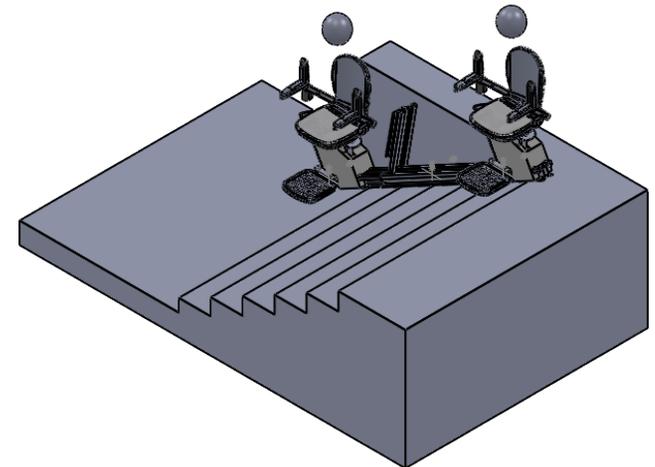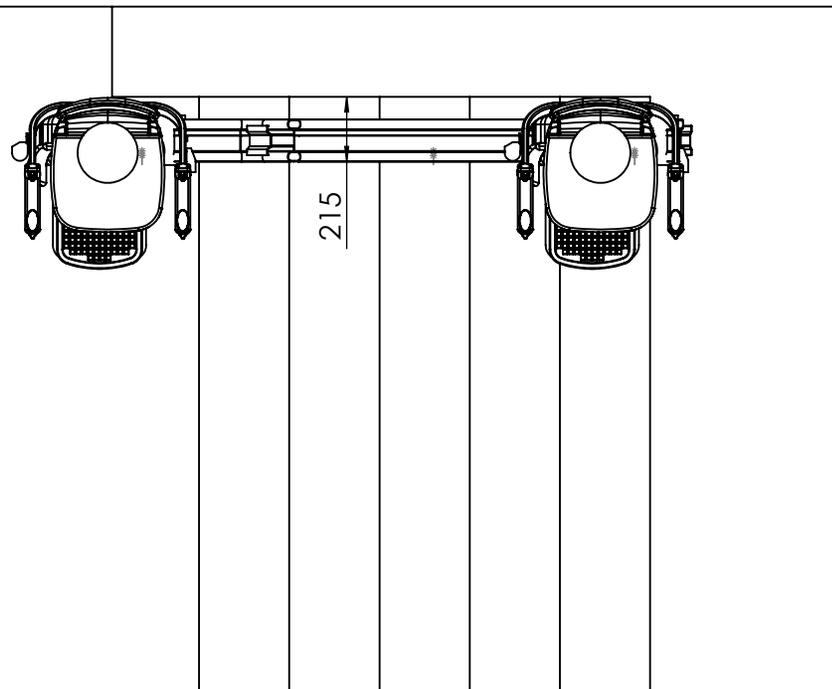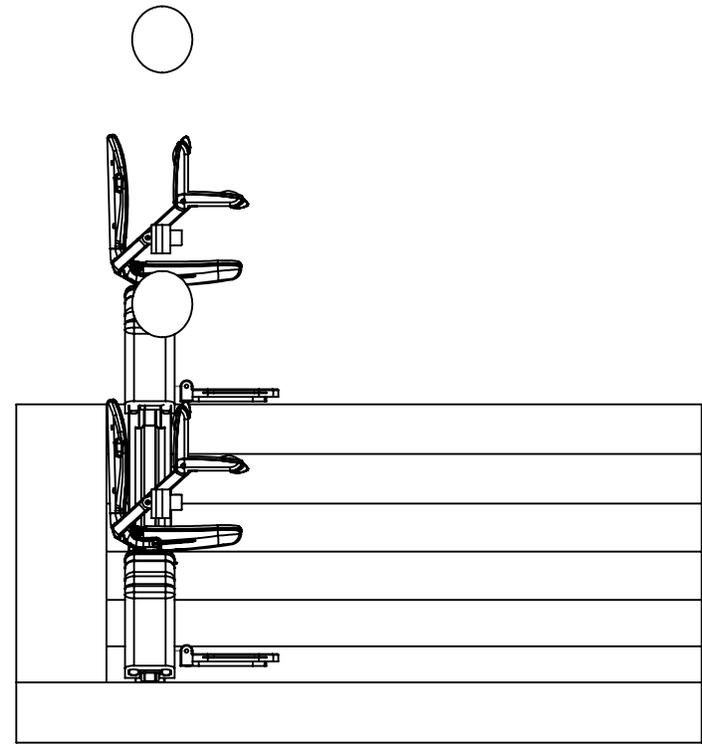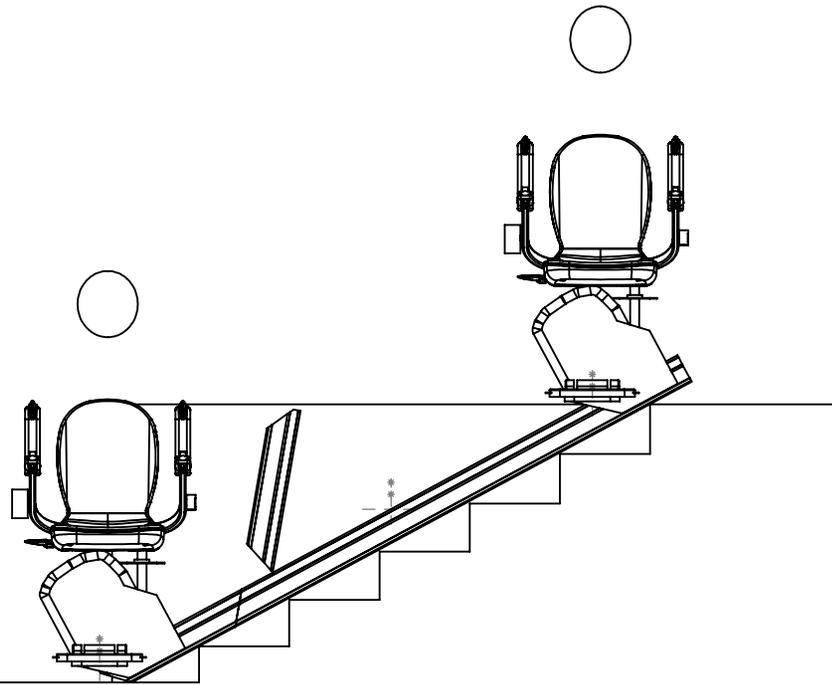





**VERTITEC**  
**REF.-Abatible**

DWG. NO.

REV.

BORJA PEIRÓ SIGNES

SHEET 1 OF 1

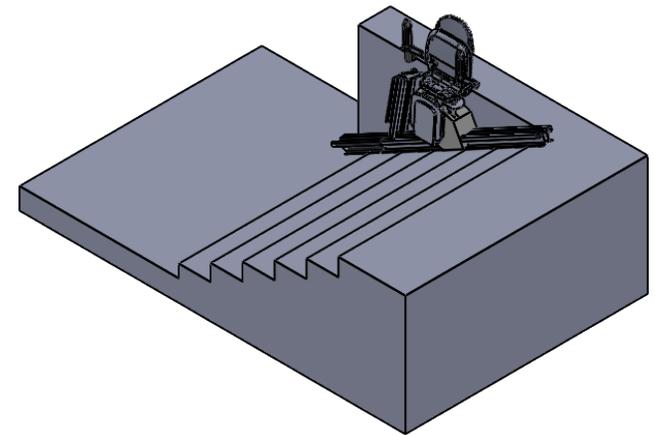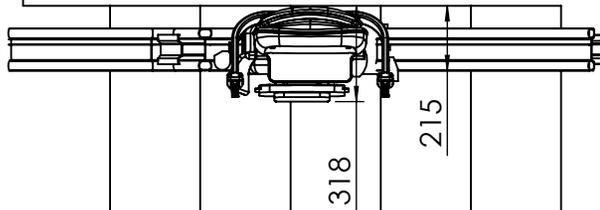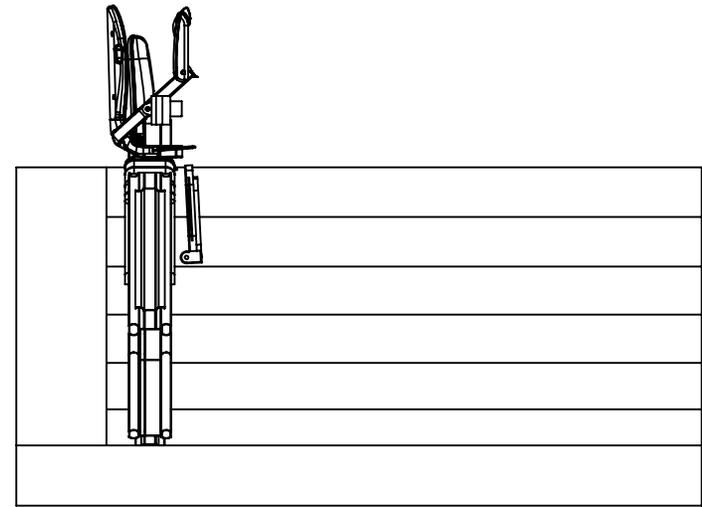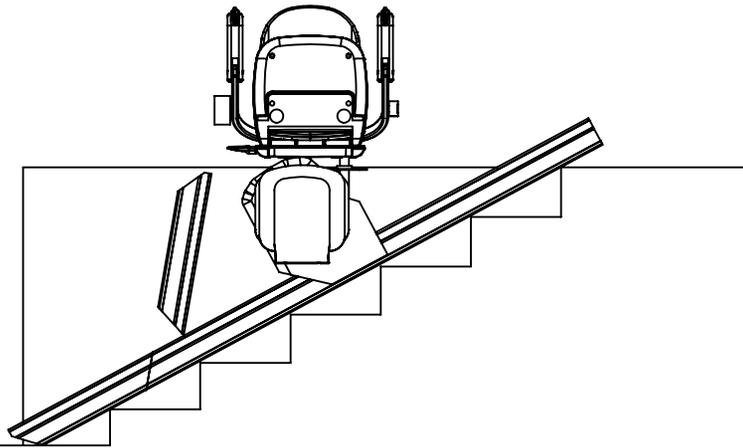

**VERTITEC**  
**REF.-Abatible plegada**

DWG. NO.  
OT- /18

REV.

BORJA PEIRÓ SIGNES

SHEET 1 OF 1